





Systems

STA+CHA Start & Charging

VOLT

Voltage distribution

Components

F2 Fuse

F29 Fuse

F3 Fuse

F33 Fuse

F4 Fuse

FV4 Main Fuse

F8 Fuse

G1 Battery

F9 Fuse

G2 Alternator

F13 Fuse

M1 Starter

F14 Fuse

S1 Switch - Starter

F15 Fuse

Y21 Stroke magnet - Unlock ignition key

F19 Fuse

Connectors

X1 Instrument panel & Body

X3 Instrument panel & Engine

X2 Instrument panel & Engine

X8 Instrument panel & Body

Grounding Points

1 Body, front, left

8 Engine

7 Engine

Abbreviations

10A 10 Ampere

LWR Headlamp levelling

15 Ignition voltage

MCO Minimum Capacity, Engine Oil

20A	20 Ampere	MEM	Memory, mirror and seat adjustment
30	Constant voltage	MID	Multi Info Display
AB	Airbag	MK	Engine cooling
ABS	Anti-Lock Brake System	MT	Manual transmission
ASP	Outside mirror	NAV	Navigation System
AT	Automatic transmission	PBSL	Park brake shift lock
ATS	Automatic transmission switch	RFS	Reversing lamps
CID	Color Info Display	SD	Sun roof
CLC	Car level control	SH	Seat heating
CRP	Carphone	SL	Stop lamps
CSR	Relay - Consumer switch-off, Time Delay	STA	Start & Charging
D	Diesel	TC	Traction control
DWA	Anti-theft warning system	TEL	Telephone
ECC	Electronic climate control	TFL	Daytime running light
EMP	Radio	TID	Triple Info Display
ESP	Electronic stability program	TVC	Phone/voice Control
F9	Fuse F9	WA	Washer
F15	Fuse F15	WD	Washer nozzle
FH	Window lifters	WI	Wiper
GID	Graphic Info Display	WS	Warning buzzer
HKL	Power steering	Y22DTH	Engine Y22DTH

www

	Hazard warning switch	Y25DT	Engine Y25DT
IH	Independent Heater	Y26SE/Y32SE	Y26SE/Y32SE engines
IMO	Immobiliser	Z22XE	Engine Z22XE
INS	Instrument	ZIG	Cigarette lighter
IRL	Interior lamp	ZV	Central door locking
LSW	Light switch		

Color codes

BK	Black	BUWH	Blue-White
BKRD	Black-Red	GN	Green
BKVT	Black-Violet	GNWH	Green-White
BN	Brown	RD	Red