

Subject: Programming

Vehicles: All with CAR200, CAR 300, CAR 400, CDR 500 and CCR 600 Radio/Cassette/CD

Display Logic:

1. Switch the radio off
2. Hold down pre-set buttons 4 and 6
3. Switch the set on, keeping the pre-set buttons 4 and 6 held, the display will show either DIGIT 8 or DIGIT 10. If the setting needs to be changed, keep the buttons held until a confirmation "bleep" is heard and the display changes to the new setting.

DIGIT 8 - Corsa, Tigra, Astra

DIGIT 10 - Vectra, Omega

Pulse Programming

1. Switch radio off
2. Hold down UML button and pre-set button 1, 2 or 3
3. Switch the set on keeping the UML button and confirmation "bleep" is heard

Pre-set button 1	-	IMPULS-1	=	7,000	pulses/km all vehicles up to 1994 MY
Pre-set button 2	-	IMPULS-2	=	16,000	pulses/km all front wheel drive vehicles as of 1994 MY
Pre-set button 3	-	IMPULS-3	=	25,000	pulses/km all rear wheel drive vehicles as of 1994 MY