


## Connecting up a drivers electric memory seat

Bolted under drivers seat there should be the following relay box...

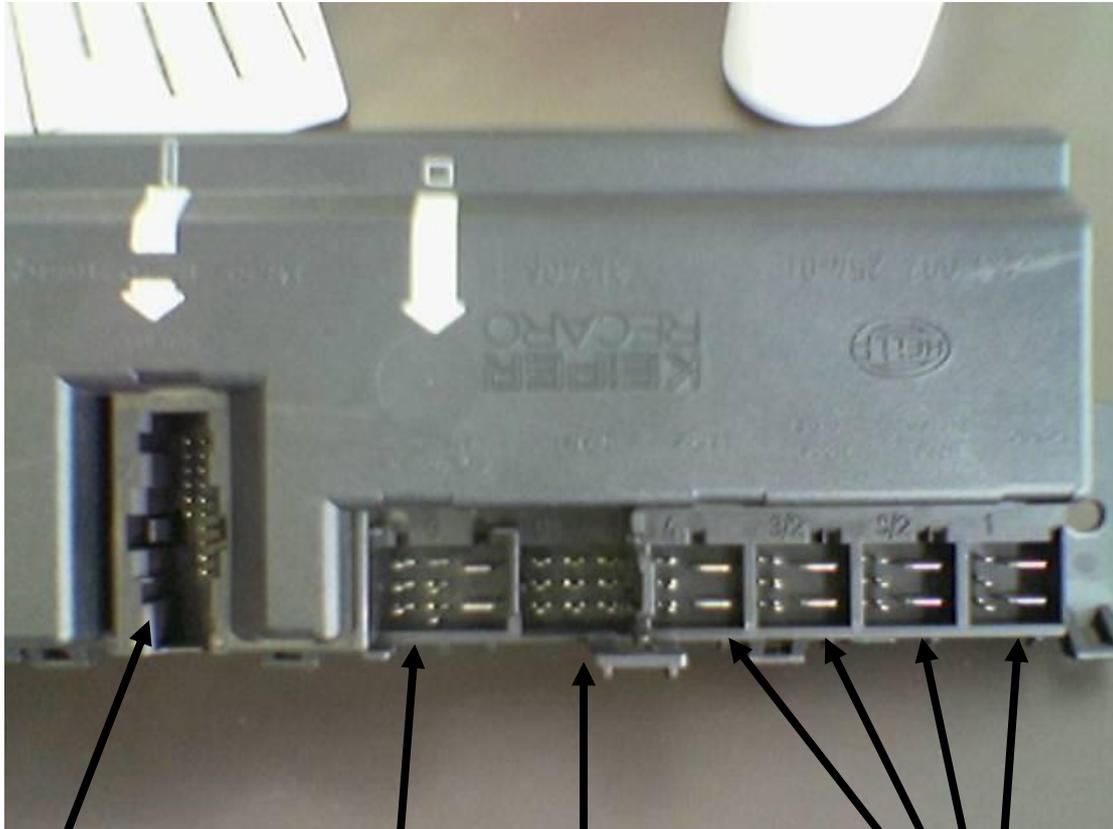


Output to door and rearview mirrors (ignore this unless your loom has the necessary wiring)

Power Supply Input

Output to Seat Switches (already connected)

Output to Seat motors (already connected)

try and get a matching plug for the power feed connector if possible (marked as number 6 on the box) - connect feed and earth wires as follows...

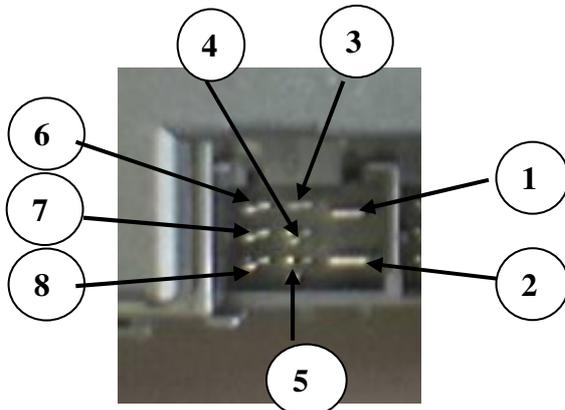

+VE to pins 1, 3 and 4

-VE to pins 2 and 5

pins 6, 7, 8 are unused

## NOTES

If there's a connector hanging off the seat which appears to be a straight fit onto the old seats power supply its for the seat heating so don't connect it up – you could possibly use it as the power supply into the relay box above. Alternatively when I was fitting mine, I found a pair of wires (red & brown) running alongside the seat, under the plastic sill and used that instead...

The passenger seat should plug straight in to the old seats power connector and should work straight off...